


Step - 1 Instructions

- ✓ Open Vibes configurator app on your Android device, and ensure the devices turned ON.

Vibes Configuration



Ensure the Device switch is ON

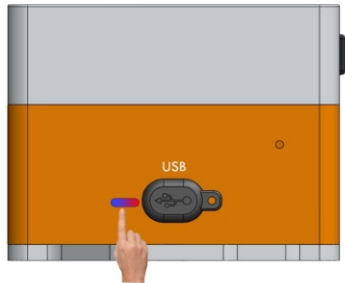

Ensure the Device LED is ON


✓ Let's Connect

NEXT

Step - 2 Device Connection

- ✓ Connect your mobile wi-fi with Vibes device and return to the Vibes configuration app and select configure.

Vibes Configuration

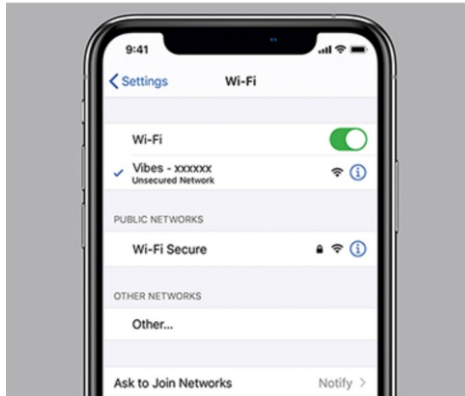


Connect your device to 'Vibes-xxxxxx' and return to the Vibes configuration app
Default Password: password

SET WIFI

CONFIGURE

Step - 3 Dashboard

- ✓ Here you can monitor device data on local dashboard

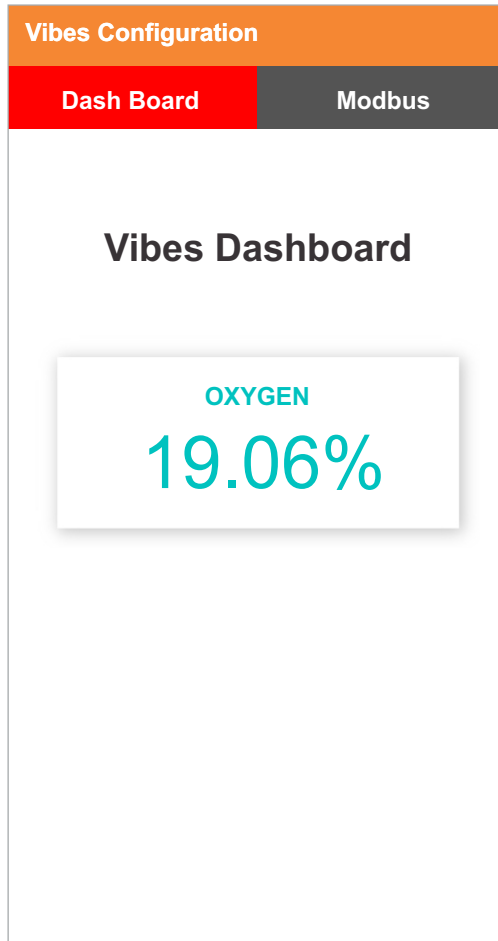

Step - 4 Configuration for Modbus Devices

- ✓ Enter Modbus device ID and Baud Rate (only for MODBUS Devices)

Vibes Configuration

Dash Board **Modbus**

RS485-Modbus RTU Parameters

Device ID

BaudRate

SAVE

Modbus ID : 10
BaudRate : 9600

Our Sensor Default BaudRate is 9600